



### Important safety and mounting instructions

**EN**

- Read and follow the safety and mounting instructions, keep these instructions easily accessible and always include them when passing the LH 61 on to third parties.
- Also read and follow the installation instructions contained in the operating manual of the studio monitor to be mounted.
- When mounting, follow the local, national and international regulations and standards.

#### Intended use

The LH 61 is a holder for mounting a studio monitor on a ceiling or a stand and providing optimal orientation. The LH 61 is only suitable for 2-way studio monitors and must only be used indoors in clean, dry rooms such as studios.

To properly mount the LH 61 together with a studio monitor, you need additional Neumann accessories (see the "Mounting Hardware Matrix" at [www.neumann.com](http://www.neumann.com)) and additional fastening elements for mounting on a ceiling, which are not included with delivery.

The LH 61 must not be used for other purposes or in other environments. In case of any damage or any deviation from the safety and mounting instructions, immediately dismount the studio monitor and the LH 61.

#### Required qualifications

Only skilled personnel may attach the LH 61 to the studio monitor and mount it on a ceiling or stand. Due to his/her technical training, know-how and experience as well as knowledge of relevant provisions, regulations and standards, the specialist must be able to assess assigned tasks, recognize potential hazards and ensure appropriate safety measures.

#### Safety instructions for mounting

- Mount only one LH 61 to one studio monitor, as described in these assembly instructions.
- If the studio monitor is heavy, find a second person to help carry out the work; during the work, place the studio monitor on a flat, stable surface that can support its weight.
- Place something soft underneath the studio monitor so that you do not scratch its surface while performing the work.
- Always use the enclosed original accessories.
- The ceiling or stand must be able to support the weight of the studio monitor and all accessories used, such that no parts will fall even if someone pulls hard on the power or audio cables. When calculating the weight, also take into account the additional leverage.
- When mounting the LH 61 on a ceiling, use fastening elements (not included with delivery) that are sufficiently dimensioned to ensure that the entire weight is held securely.
- Mount the LH 61 and the attached studio monitor on a flat, non-slip surface or on a suitable stand.
- Attach the angle piece to the ceiling or stand. If necessary, use additional Neumann accessories (e.g. LH 29 or LH 43 in combination with LH 47).
- Then attach the mounting bracket and the brace for the vertical inclination adjustment to the angle piece and hook the studio monitor into the LH 61. Then adjust the studio monitor to the desired inclination.
- Tighten all screws by hand. Once you have finished mounting and aligning the studio monitor, ensure that all screws are firmly tightened.
- Take additional measures to ensure that the LH 61 and the attached studio monitor cannot fall. Use safety wires that are sufficiently dimensioned for the weight to be secured.
- Every 3 months, check that all screws are properly tightened and that the LH 61, the studio monitor and the ceiling or stand to which the LH 61 is fastened are in the proper condition.
- Replace the safety wire once it has already prevented the studio monitor from falling once.

### Delivery includes

- A: 1 x mounting bracket
- B: 1 x brace for vertical inclination adjustment
- C: 1 x angle piece
- D: 2 x metal washers, M6
- E: 2 x Allen screws, M8x12
- F: 6 x Allen screws, M6x12
- G: 1 x Allen key, 5 mm
- H: 1 x Allen key, 4 mm

### Specifications










Weight	1.2 kg
Dimensions when assembled	approx. 193 x 78 x 284 mm (H x W x D)
Max. load	10 kg

### Warranty

For the current terms and conditions of the warranty, please visit [www.neumann.com](http://www.neumann.com).




# LH 61 Mounting manual

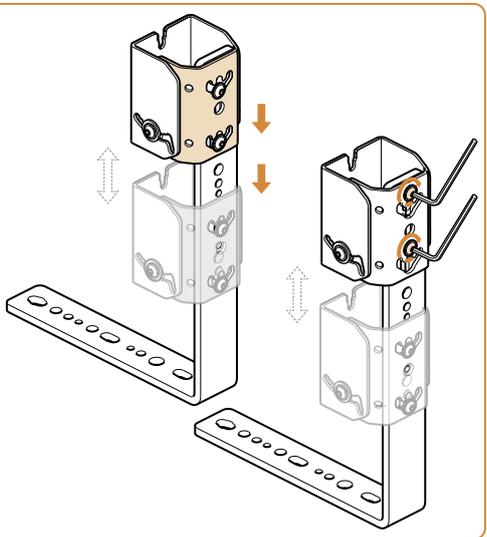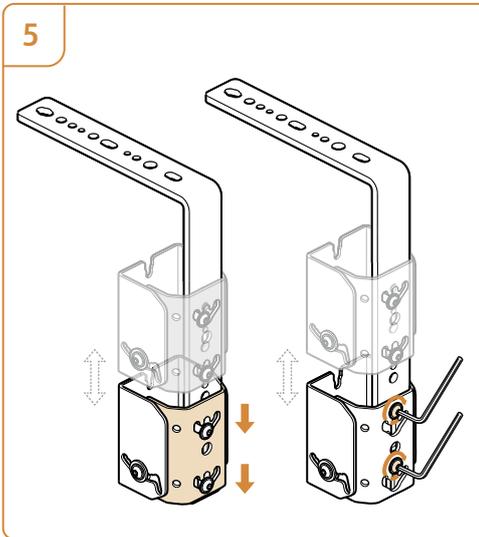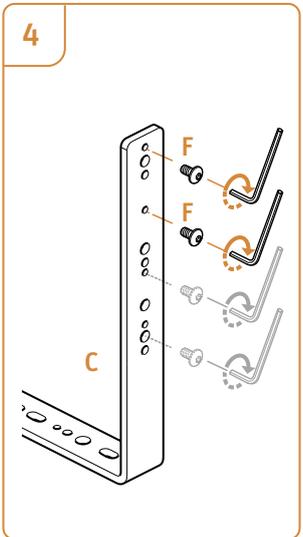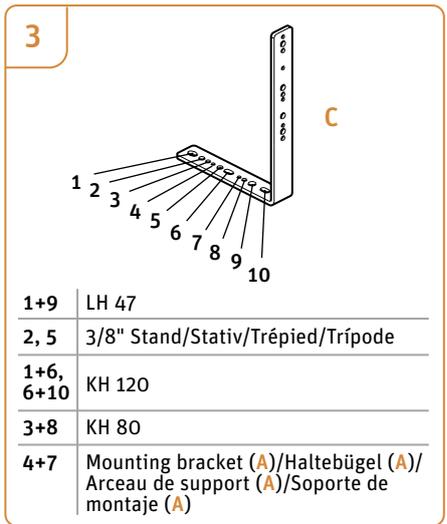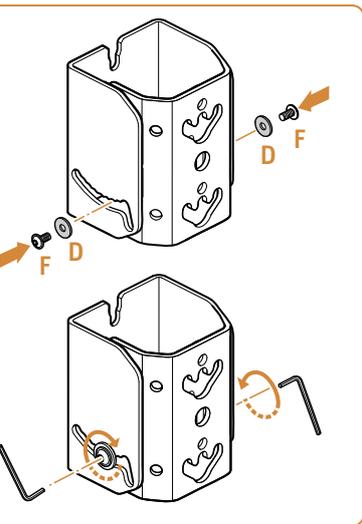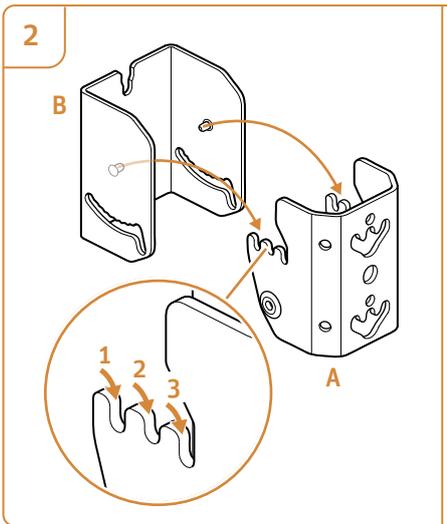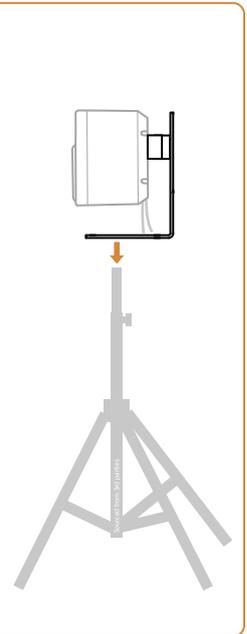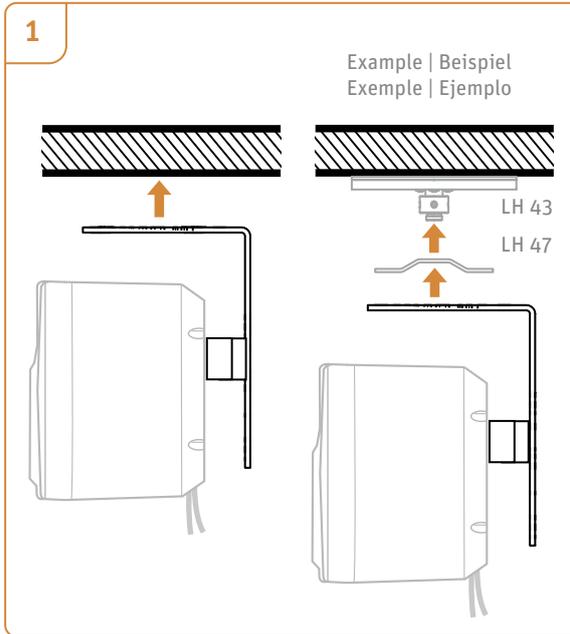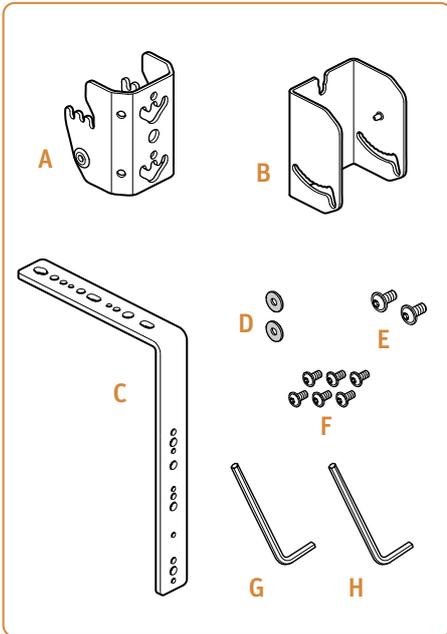




6


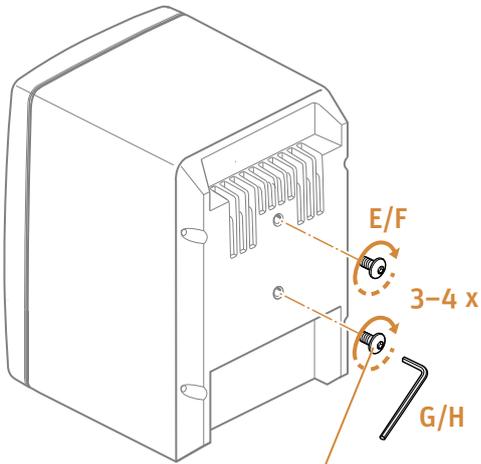


M6: E, G  
M8: F, H

7

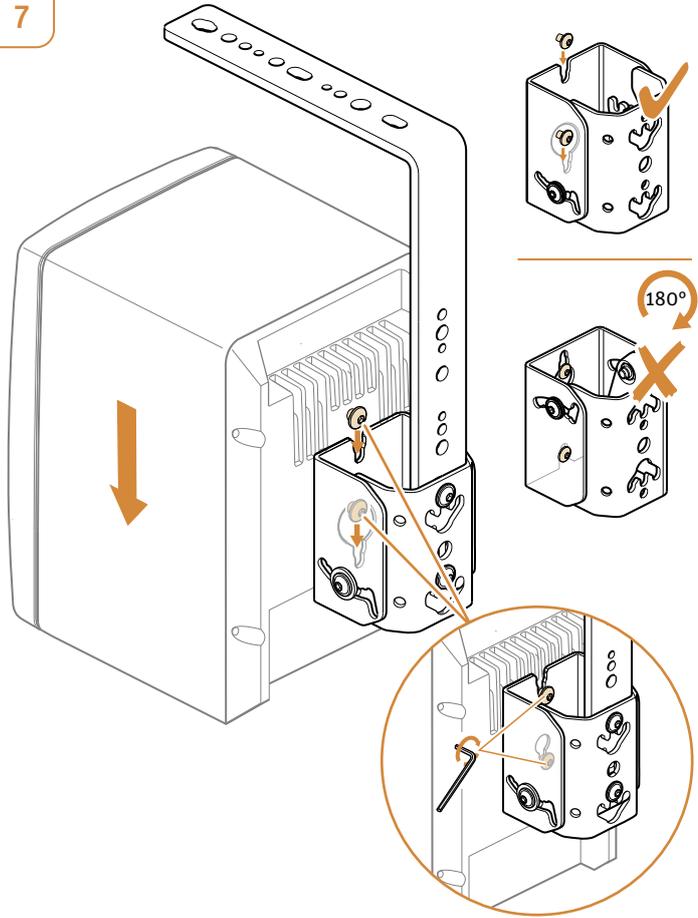

8

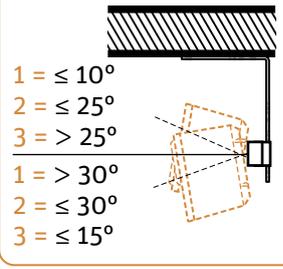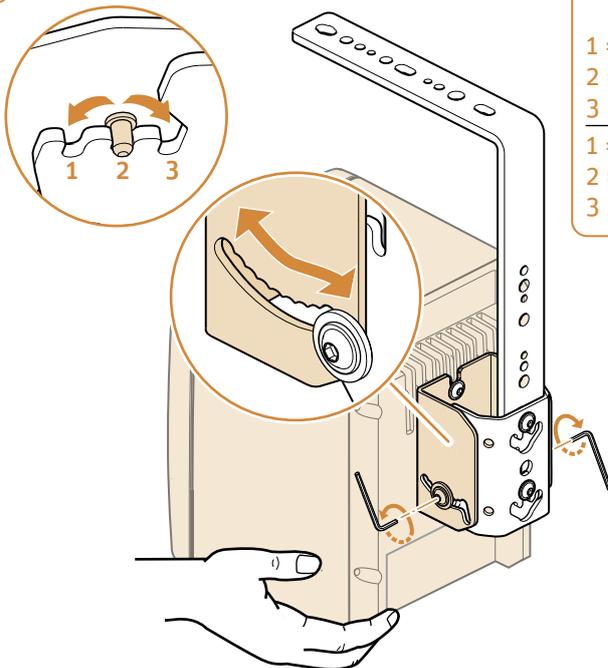

9

